

Kenmore 385.19233, 385.19233400 Sewing Machine Manual

[DOWNLOAD HERE](#)

Kenmore 385.19233 385.19233400 sewing machine manual in multilanguages	
SECTION I. NAME OF PARTS	
Cabinets and sewing machine tote bag	2
Names of parts	2
Available accessories and attachments	4
SECTION II. GETTING READY TO SEW	
Connecting machine to power supply	6
Before using your sewing machine	6
For your safety	6
Polarized plug	6
Controlling sewing speed	6
Speed control lever	6
Machine operating buttons	8-12
Up/down needle position button	8
Auto-lock button	8
Reverse stitch button	8
Screen sharpness adjusting dial	8
Cursor keys	8
Mode key	10
Stitch width selection key	10
Stitch length selection key	10
Memory key	10
Clear key	12
Function touchpad	12
Direct pattern selection	12
Number keys	12
Pattern selection and screen indication	14
Number key selection	14
Language selection	14
Presser foot lifter	16
Thread cutter	18
Extension table	18
Detaching the table	18
Attaching the table	18
Accessory box	18
Changing needle	18
To remove and attach the foot holder	20
To remove	20

.....	20 To attach	20
Changing presser foot	20 To remove	
.....	20 To attach	20
Presser foot types	22-24 Zigzag foot (Foot A)	
.....	22 Straight stitch foot (Foot H)	22 Automatic
buttonhole foot (Foot R)	22 Zipper foot (Foot E)	22
Blind hem stitch foot (Foot G)	22 Satin stitch foot (Foot F)	
.....	22 Overedge foot (Foot C)	22 Overcast foot
(Foot M)	22 Darning foot (Foot P)	24
Quilter	24 1/4" Seam foot (Option)	
.....	24 Walking foot (Option)	24 Selecting
needle and fabric	26 Bobbin winding	
30-34 Removing the bobbin	30 Horizontal spool pin	
.....	30 Additional spool pin	30 Bobbin
winding	32 Inserting the bobbin	
34 Threading the machine	36-38 Threading the machine	
.....	36 Needle threader	36 Drawing up
bobbin thread	38 Adjust the needle thread tension for a straight stitch	38
Correct tension	38 Tension is too tight	
.....	38 Tension is too loose	40 Adjust
the needle thread tension for a zigzag stitch	40 Correct tension	
.....	40 Tension is too tight	40
Tension is too loose	40 SECTION III. BASIC SEWING Straight stitch	
.....	42 Starting to sew	42
Changing sewing direction	42 Finishing sewing	
.....	42 Using the seam guides on the needle plate	44 Turn
a square corner	44 Quilting	
.....	44 Sewing on heavy fabrics	
.....	46 Manual stitch length	46 Variable

needle position	46 To drop or raise the feed dog
..... 48 Basting	48 Attaching the
darning foot	48 To sew
Automatic reverse stitch	50 Triple stretch stitch
..... 50 Straight stretch	50
Auto-lock stitch	52 Saddle stitch
..... 52 Zigzag stitch	52
To change the width and length	52 Overcasting
..... 54 Tricot stitch	54
Knit stitch	54 Overedge stitch
..... 56 Double overedge stitch	56
Button sewing	58 Automatic buttonhole
..... 60-64 Preparation for sewing	60 Starting to
sew	62 Adjusting the stitch width and density in buttonholes
To change the stitch width	64 To change the stitch density
..... 64 Round end buttonhole	64 Keyhole
buttonhole	64 Stretch buttonhole
..... 66 Knit buttonhole	66
Adjusting the stitch width and density in rounded end and keyhole buttonhole	
..... 66	393 pagesSearches:how to attach zipper foot for kenmore sewing
machine	

[DOWNLOAD HERE](#)

Similar manuals: